


USE & CARE INSTRUCTIONS for ULTRA-2 COLD DRINK DISPENSER WITH PAF DISPENSER


NOTICE - This guide is for quick reference only and is not intended to replace the information in the Operation Manual!

DISASSEMBLY & CLEANING


EMPTY ALL PRODUCT FROM THE ULTRA HOPPERS INTO A BUCKET OR CONTAINER BEFORE PROCEEDING!

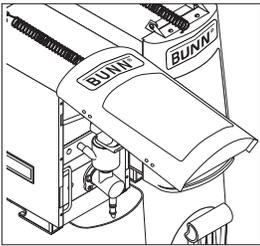


1. Open the Cabinet Door and allow the support arms to lock in place. Door must remain open during the entire cleaning procedure.

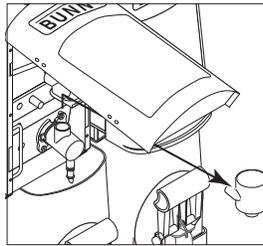


2. Pull the Mixing Chamber out of the Whipper Chamber.

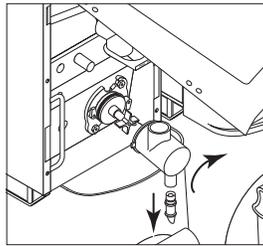


3. Twist the Whipper Chamber clockwise and pull it off the Whipper Chamber Receptacle.

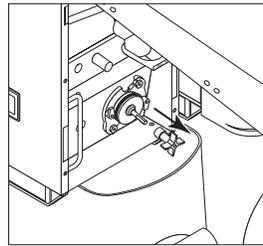


4. Pull the Frother off the Motor Shaft. Notice the flat keyway on the shaft and the matching keyway inside the Frother. It is important that these two keyways are lined up when reassembling.

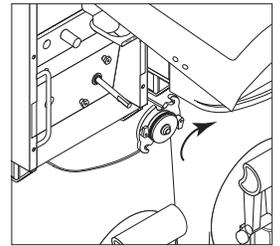


5. Twist Whipper Chamber Receptacle clockwise and pull it off the Motor Shaft.

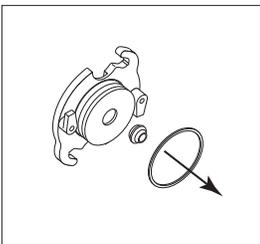


6. Slip the O-ring off the Whipper Chamber Receptacle and remove the shaft seal.

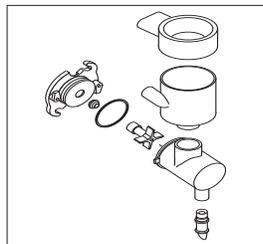


7. Wash components in a mild solution of dish detergent using a bristle brush.

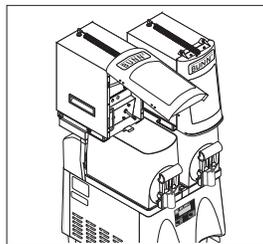


8. Slide PAF assembly back until it latches before removing ULTRA Hoppers.

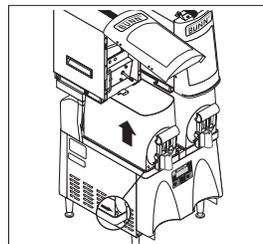


9. Depress the Hopper Lock Plunger, lift slightly.

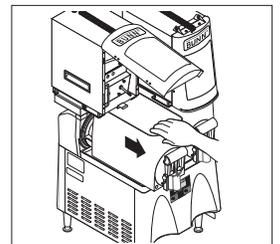


10. Pull the Hopper assembly forward and remove.

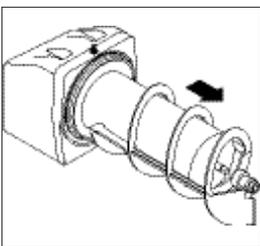


11. Pull the Auger from the Cooling Drum.

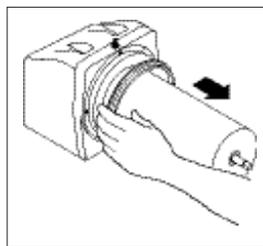


12. Remove the Hopper Seal from the flange on the Cooling Drum. Remove Auger Shaft Seal (if used on this machine).

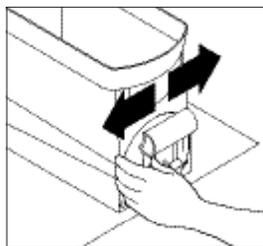


13. **CAUTION:** Faucet Valve is under spring tension. Spread one side of the Handle first, then the other and disconnect from the Hopper.

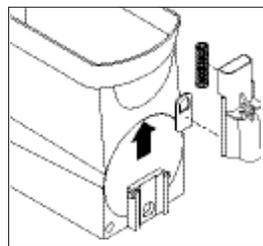


14. Carefully slide Valve up to remove Spring and Faucet Seal. Extra care should be taken when handling the Seal to prevent damage.

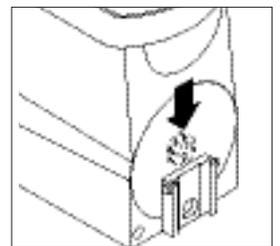

15. Remove the Auger Nose Bushing from inside the front of the Hopper.

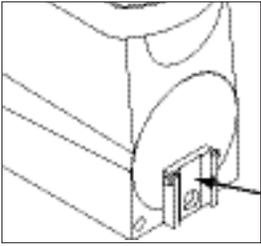

16. Do not scratch this surface when cleaning. Deep scratches could cause leakage around the seal.

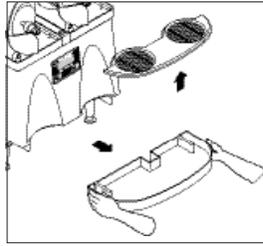


17. Remove the Drip Tray and Cover.

18. Place all parts in a clean sink with mild hot water (120°F) and sanitizer solution. Allow parts to soak for at least 5 minutes. Carefully wash all components with a clean wash cloth in the hot water and sanitizer solution. Use a clean, soft bristle brush as needed for the smaller components and tight areas. Do not immerse hopper lids. Use a commercial sanitizer that has 100 ppm of available chlorine with a concentration level of at least 3% available chlorine (KAY-5 Sanitizer). Follow the sanitizer's mixing instructions to ensure 100 ppm of available chlorine.


19. Wash the Drum, Hopper Drip Trays, Top Covers, and outer enclosure using a clean wash cloth that has been dampened in the hot water and sanitizer solution. Pat particular attention to the shaft area and make sure it is thoroughly cleaned and sanitized.

20. Thoroughly rinse all surfaces with a clean wash cloth that has been dampened with hot water. Wipe dry with a clean dry wash cloth before reassembling the dispenser.


NOTE: Although most parts are dishwasher safe, they may be affected by the chemicals in some commercial sanitizing agents. Do not place the Hopper or Hopper Lids in a dishwasher. Rinse thoroughly before reassembly.

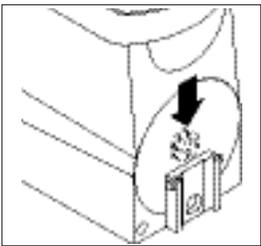


21. Replace the Auger Nose Bushing inside the front of the Hopper.

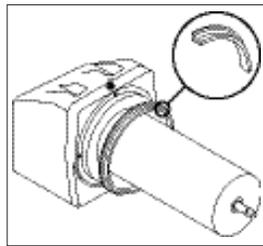


22. Install the Hopper Seal over the flange at the rear of the Cooling Drum as shown. Install Auger Shaft Seal (if used on this machine).

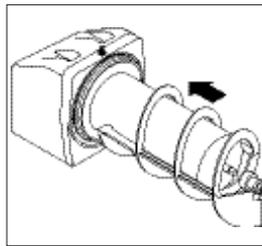


23. Align the Auger Shafts with the Augers. Push the Augers as far as they will go and rotate them so the flat face of the Auger Shaft is aligned with the flat face of the Auger nose.

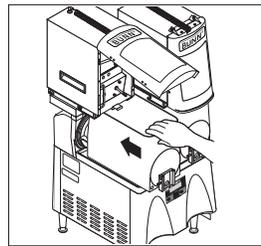


24. Install the Hopper over the Auger and Cooling Drum and slide it into place.

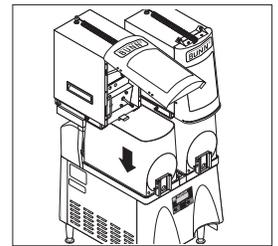


25. Push down until the Hopper Lock Plunger snaps into place.

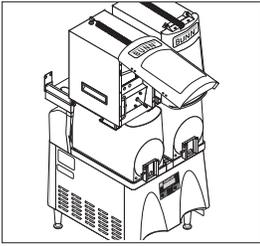


26. Slide PAF assembly forward.

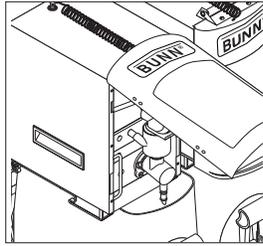


27. Reassemble and install all PAF parts. Close Door.

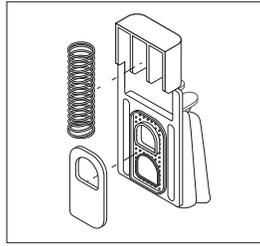


28. Position the Faucet Seal and Return Spring in the Faucet Valve.

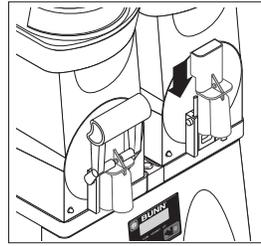

29. Slide the Faucet Valve assembly into place on the Hopper.

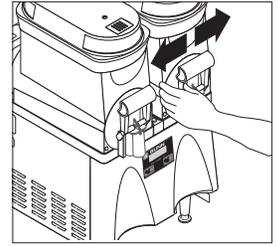


30. Press down on the Valve to compress the Spring. Position the Faucet Handle over the Faucet Valve one side at a time and snap into place on the Hopper.

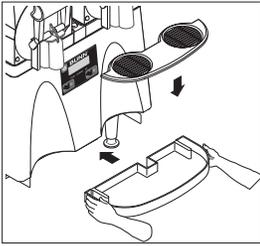


31. Install the Drip Tray and Cover.


THOROUGH CLEANING OF THE PAF HOPPER (Once a week)

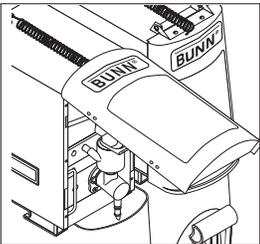


1. Open the Cabinet Door and allow the support arms to lock in place.

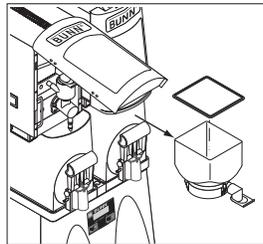


2. Remove the Hopper/Base Assembly from the Cabinet. Remove the Cover and empty the contents.

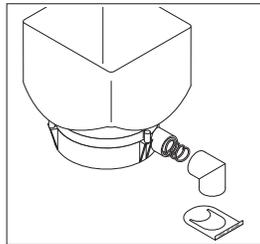


3. Pull the Ejector Elbow off the Hopper Base. Remove the Slide Gate from the Ejector Elbow.

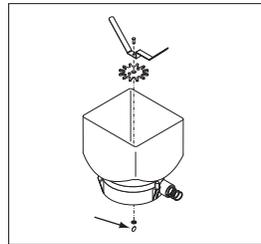


4. Remove the Wiper Blade and Drive Gear by removing the Retaining Ring from the Wiper Blade Shaft.

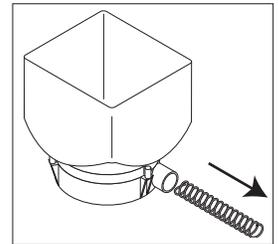

5. Remove Auger by pulling it out the front of Hopper Base.

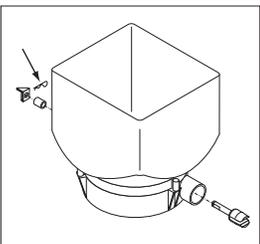

6. Remove the Auger Drive Shaft by removing Retaining Clip from Auger Drive Shaft.

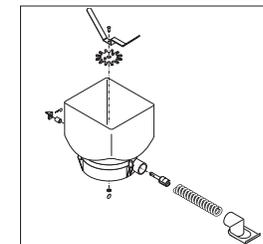

7. Wash all components in a mild solution of dish detergent using a bristle brush when needed. Rinse and dry each item thoroughly before reassembling.